

ASSEMBLY INSTRUCTION

1882FN-1 FULL BED HEADBOARD

1882FN-2 FULL BED FOOTBOARD

1882FN-3 FULL BED RAILS & SLATS

HEADBOARD LIST: (NOTE: HARDWARE PACK INSIDE THE CARTON OF 1882FN-1)



A: Headboard 1PC



E: Spring Washer F: Flat Washer G: Bolt M8*30mm 4PCS



B: Leg 2PCS




8PCS



C:LSF Wing 1PC



4PCS



H: Allen Key 5mm 1PC



I: Screw 4.0*60mm 4PCS

4PCS

J: Bolt M6*35mm K: Allen Key 4mm 1PC

FOOTBOARD AND RAILS LIST: (NOTE: HARDWARE PACK INSIDE THE CARTON OF 1882FN-3)









B: Leg 2PCS

4PCS

4PCS

4PCS

E: Spring Washer F: Flat Washer G: Bolt M8*30mm I: Screw 4.0*60mm 4PCS











J: Bolt M6*35mm 4PCS

L: Rail 2PCS

M: Footboard 1PC

N: Slat 3PCS

0: Center Suport Rail 1PC







1PC

6PCS

P: Wrench 1/4*35mm Q: Nut 1/4 R: Bolt 1/4*15mm S: Support Leg T: Bolt 1/4*48mm 3PCS


3PCS

6PCS

Page: 1/2

ASSEMBLY INSTRUCTION FOR REGULAR BED SET.

NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED IS ASSEMBLED COMPLETELY.

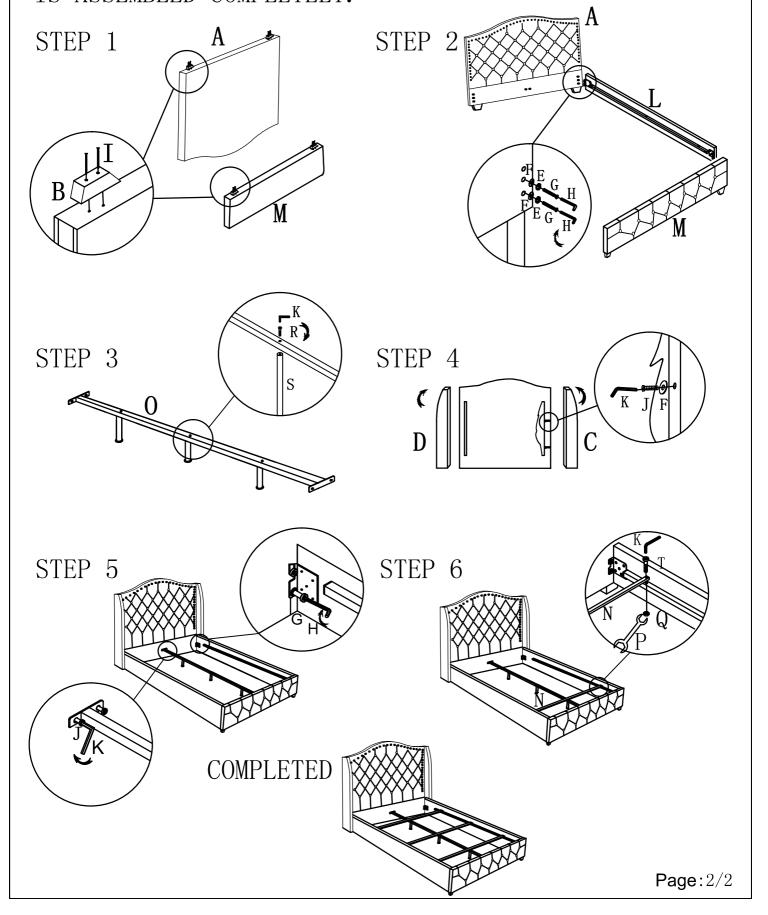

HOMELEGANCE

ASSEMBLY INSTRUCTION

1882FN-1 FULL HEADBOARD

HEADBOARD LIST: (NOTE: HARDWARE PACK INSIDE THE CARTON OF 1882FN-1)













A: Headboard 1PC




1PC

B: Leg C:LSF Wing D:RSF Wing E: Spring Washer F: Flat Washer 1PC

4PCS

8PCS





0



G: Bolt M8*30mm H: Allen Key 5mm I: Screw 4.0*60mm J: Bolt M6*35mm K: Allen Key 4mm 4PCS 1PC 4PCS 4PCS

ASSEMBLY INSTRUCTION FOR 1882FN-1 FULL HEADBOARD ONLY. NOTE: PLEASE DO NOT TIGHTEN ALL BOLTS UNTIL THE BED IS ASSEMBLED COMPLETELY.

