
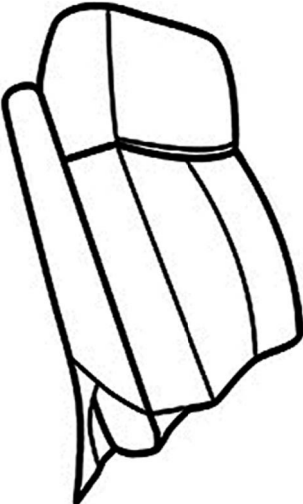


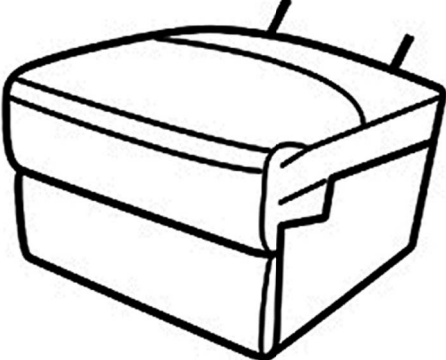

**Assembly Instruction**  
**ARMLESS CHAIR**  
**ITEM NO.: 8318-AC**


**NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.**

**COMPONENT LIST (CHAIR)**


| NO. | DRAWING   | QTY | DESCRIPTION |
|-----|---|-----|-------------|
| A   |  A line drawing of a chair backrest, showing a curved top and a seat area with vertical slats.                              | 1   | BACK REST   |
| B   |  A line drawing of a chair seat, showing a rectangular shape with a curved front edge and a small notch on the right side. | 1   | SEAT        |

## STEP#1


Align the female brackets at the back onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

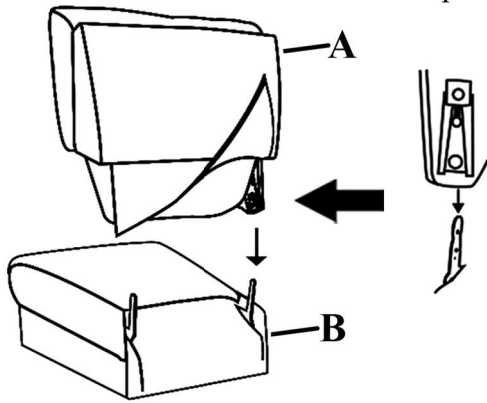


## STEP#2

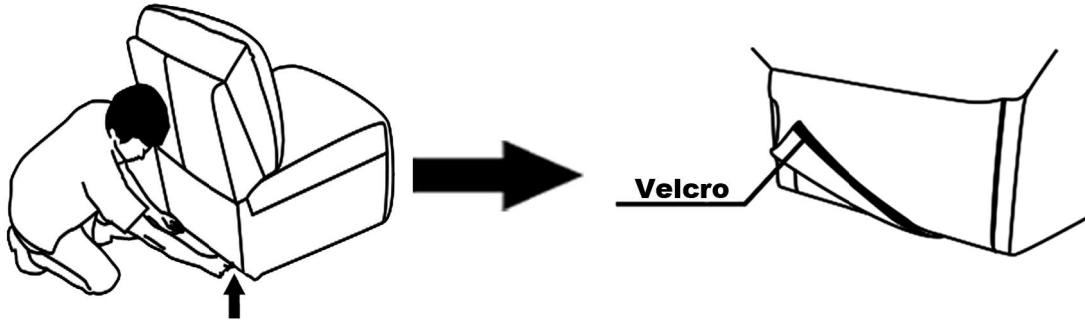

## STEP#3

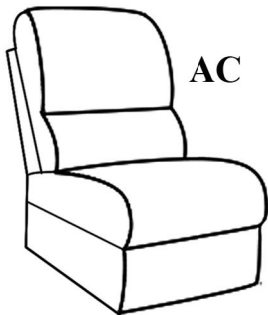

## STEP#4

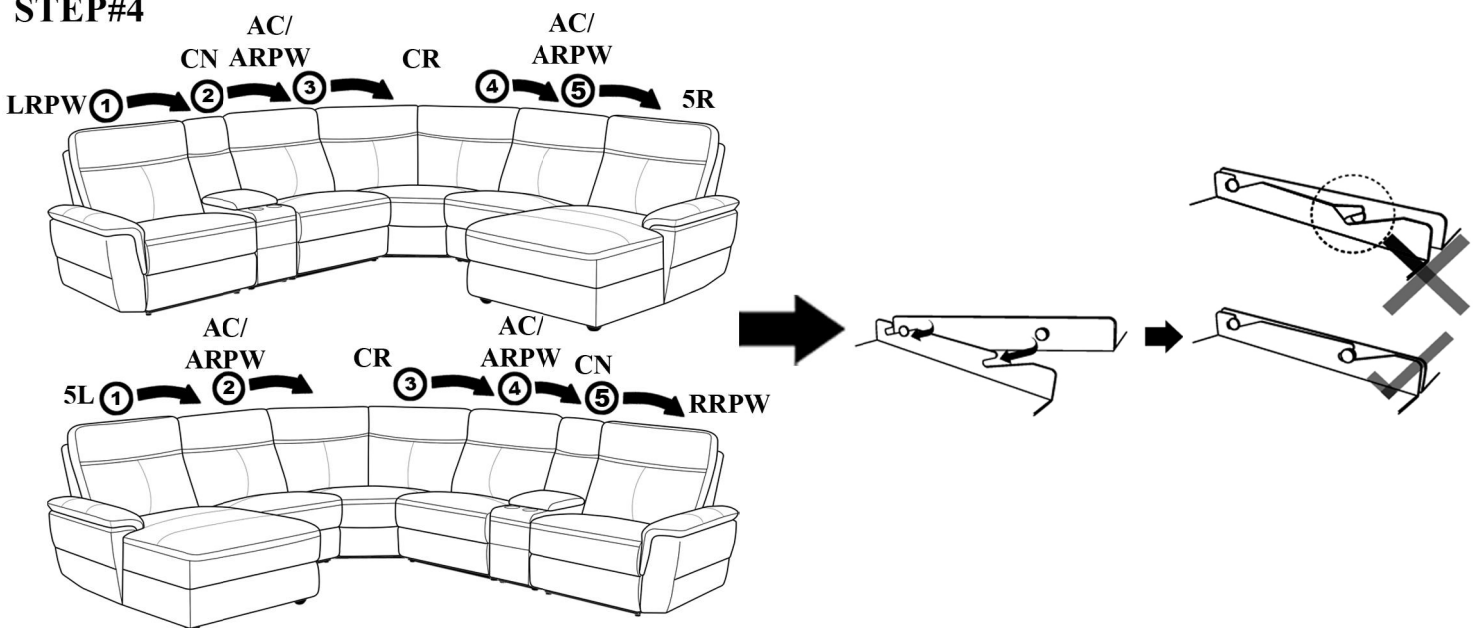

## CARE INSTRUCTION FOR TOP GRAIN LEATHER & FABRIC:

In order to maintain the original appearance of your top grain leather & fabric furniture, please follow below simple care procedure

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage leather and fabric.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe leather and fabric with professional cleanser.