



# Assembly Instruction

Chair

ITEM NO.: 9627CAF-1/9627TAN-1



Legs & hardware are packed in the box and stored under the seat cushion, please take out for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


## Component list

No	Drawing	Qty	Description
A	A line drawing of a modern-style chair with a curved back and armrests.	1	Chair
B	A line drawing of a rectangular seat cushion.	1	Seat cushion
C	A line drawing of a single wooden leg with a triangular base.	4	Wooden legs (Ø55*Ø45*195mm)
D	A line drawing of a bolt with a hexagonal head.	12	Bolt 25mm (1/4*25mm)
E	A line drawing of an L-shaped Allen key.	1	Allen key (M4*59mm)



THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW:

**WOODEN LEGS**



**HARDWARE**

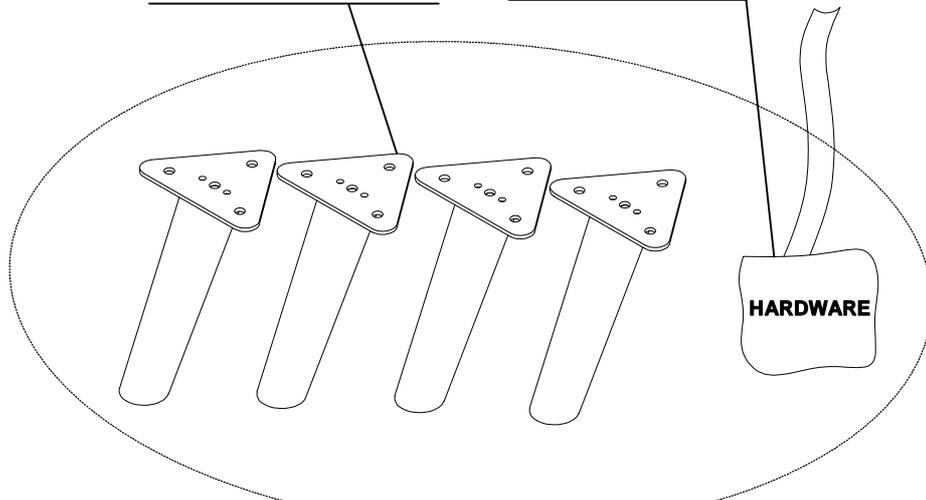


**WOODEN LEGS AND  
HARDWARE STORE  
UNDER THE SEAT  
CUSHION**

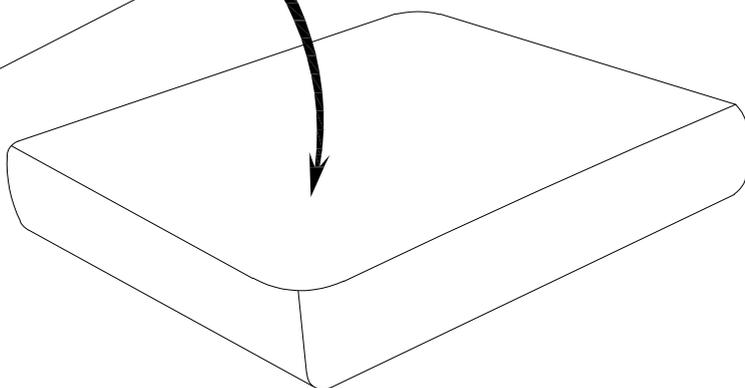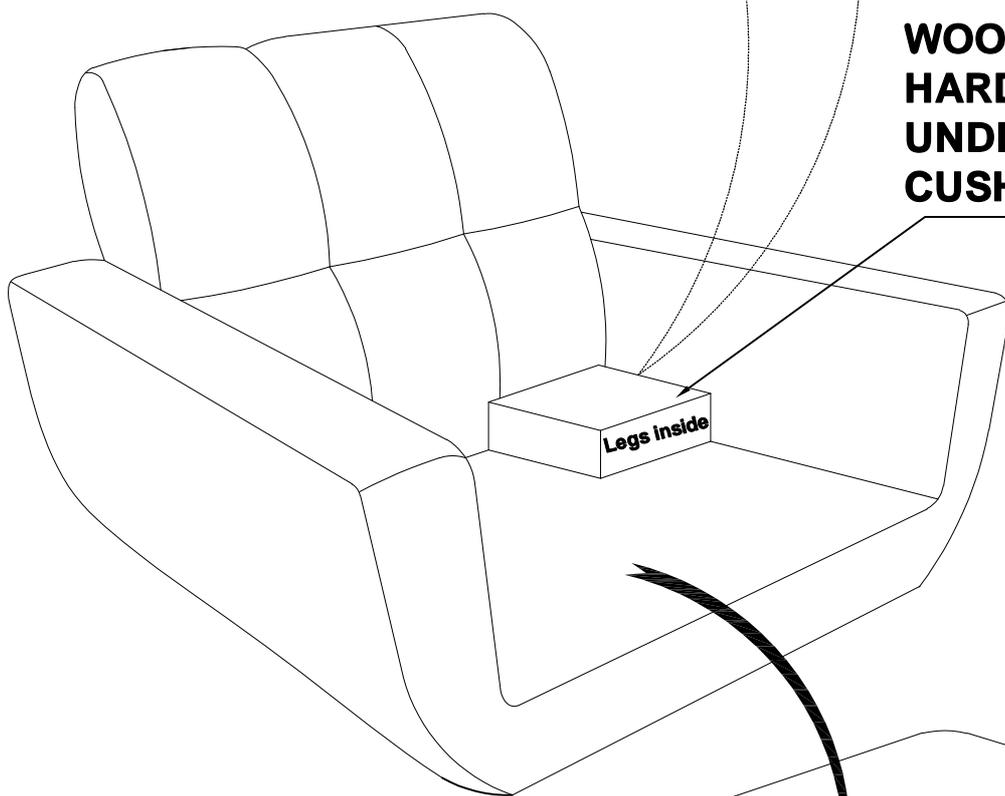

## Step #1

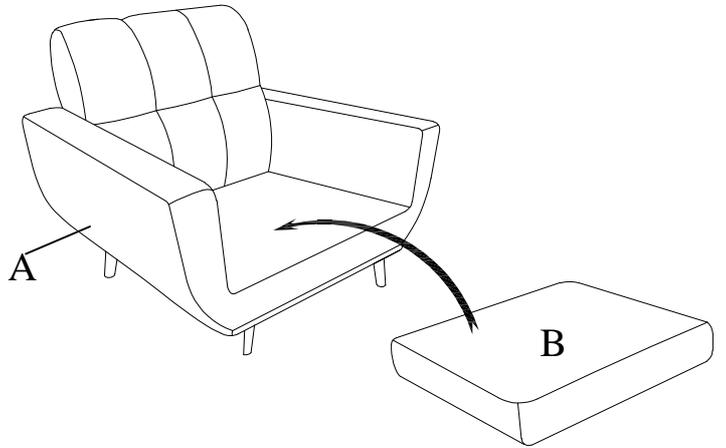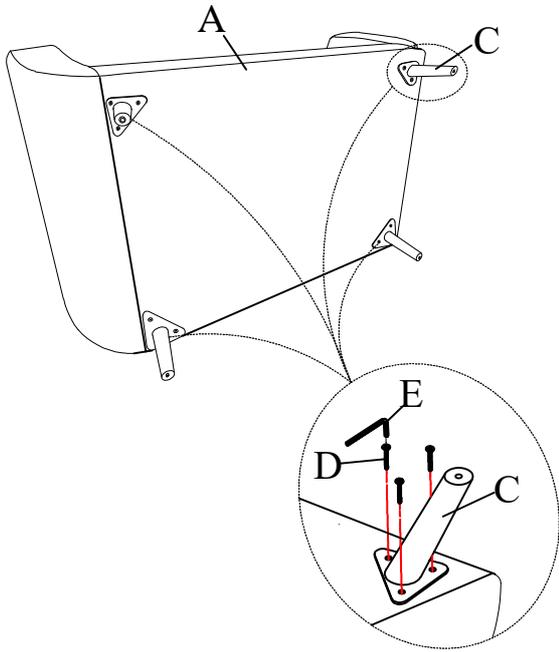


## Step #2

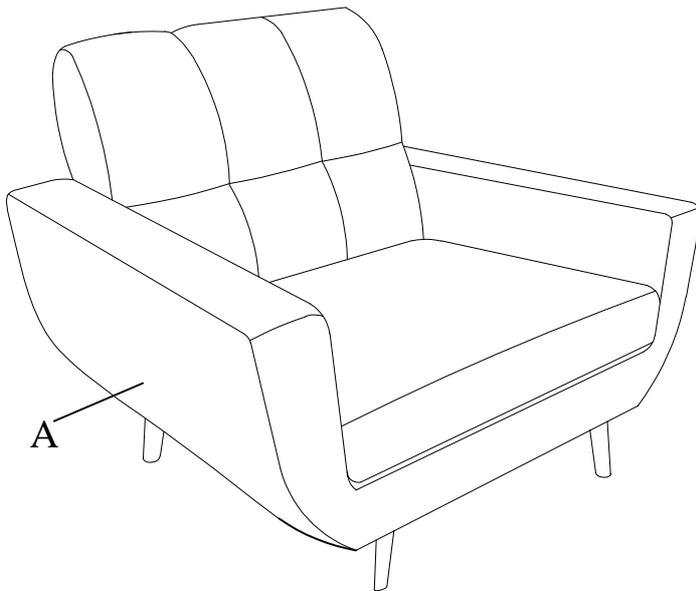

### Step #3

Assembly completed.

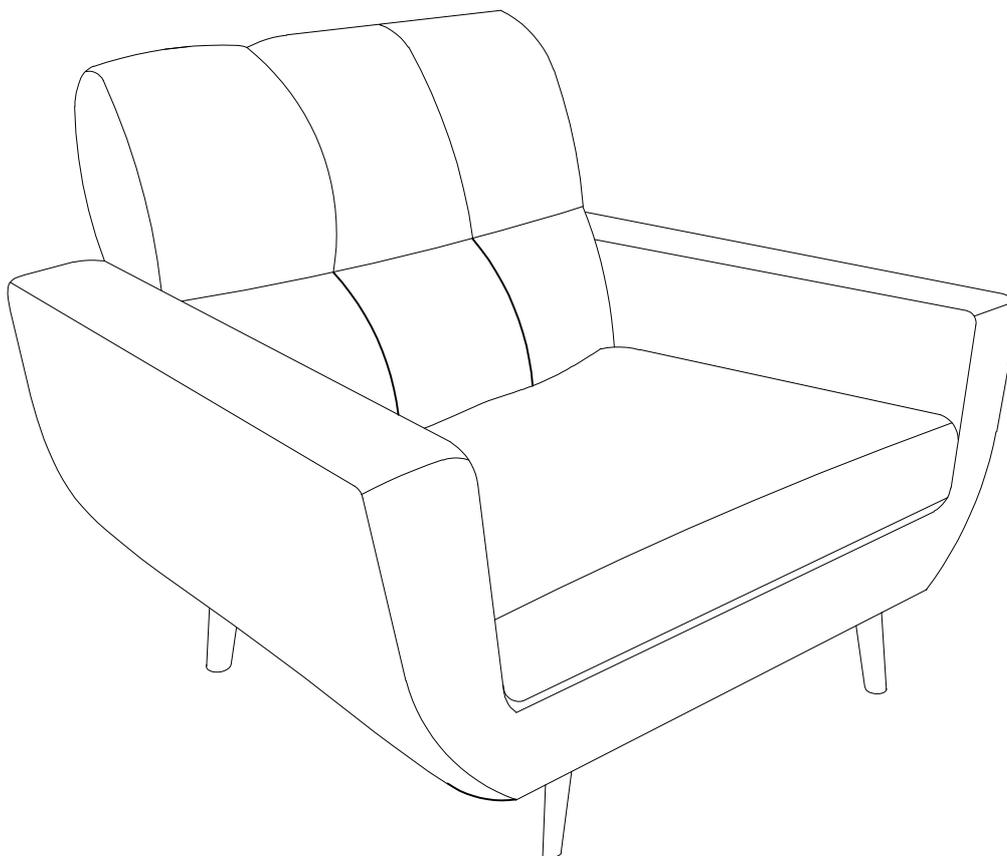

## Care Instruction for fabric Furniture:

In order to maintain the original appearance of your Textured Microfiber fabric, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabrics. Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.