

# Assembly Instruction

Chair


ITEM NO.: 8341BL-1RV/8341GY-1RV



Legs & hardware are stored under the seat cushion, please take out the legs and hardware for assembly.

**Note:** Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


## Component list

| No | Drawing   | Qty | Description                    |
|----|---|-----|--------------------------------|
| A  |   | 1   | Chair                          |
| B  |  | 1   | Seat cushion                   |
| C  |  | 1   | Pillow                         |
| D  |  | 4   | Wooden legs<br>(Ø40*Ø35*148mm) |
| E  |  | 12  | Bolt<br>(1/4*25mm)             |
| F  |  | 1   | Allen key<br>(M4*59mm)         |


**THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW:**

**WOODEN LEGS**


**HARDWARE**

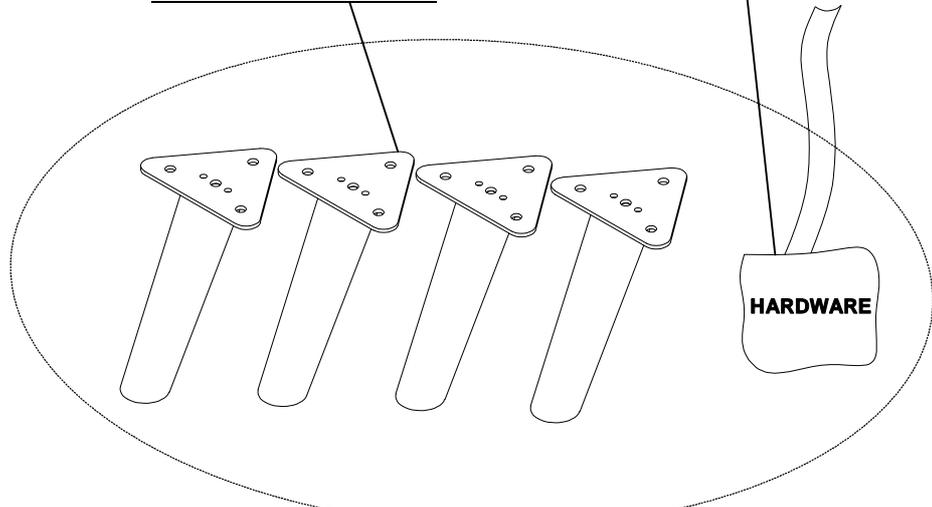


**WOODEN LEGS AND  
HARDWARE  
STORE UNDER THE  
SEAT CUSHION**

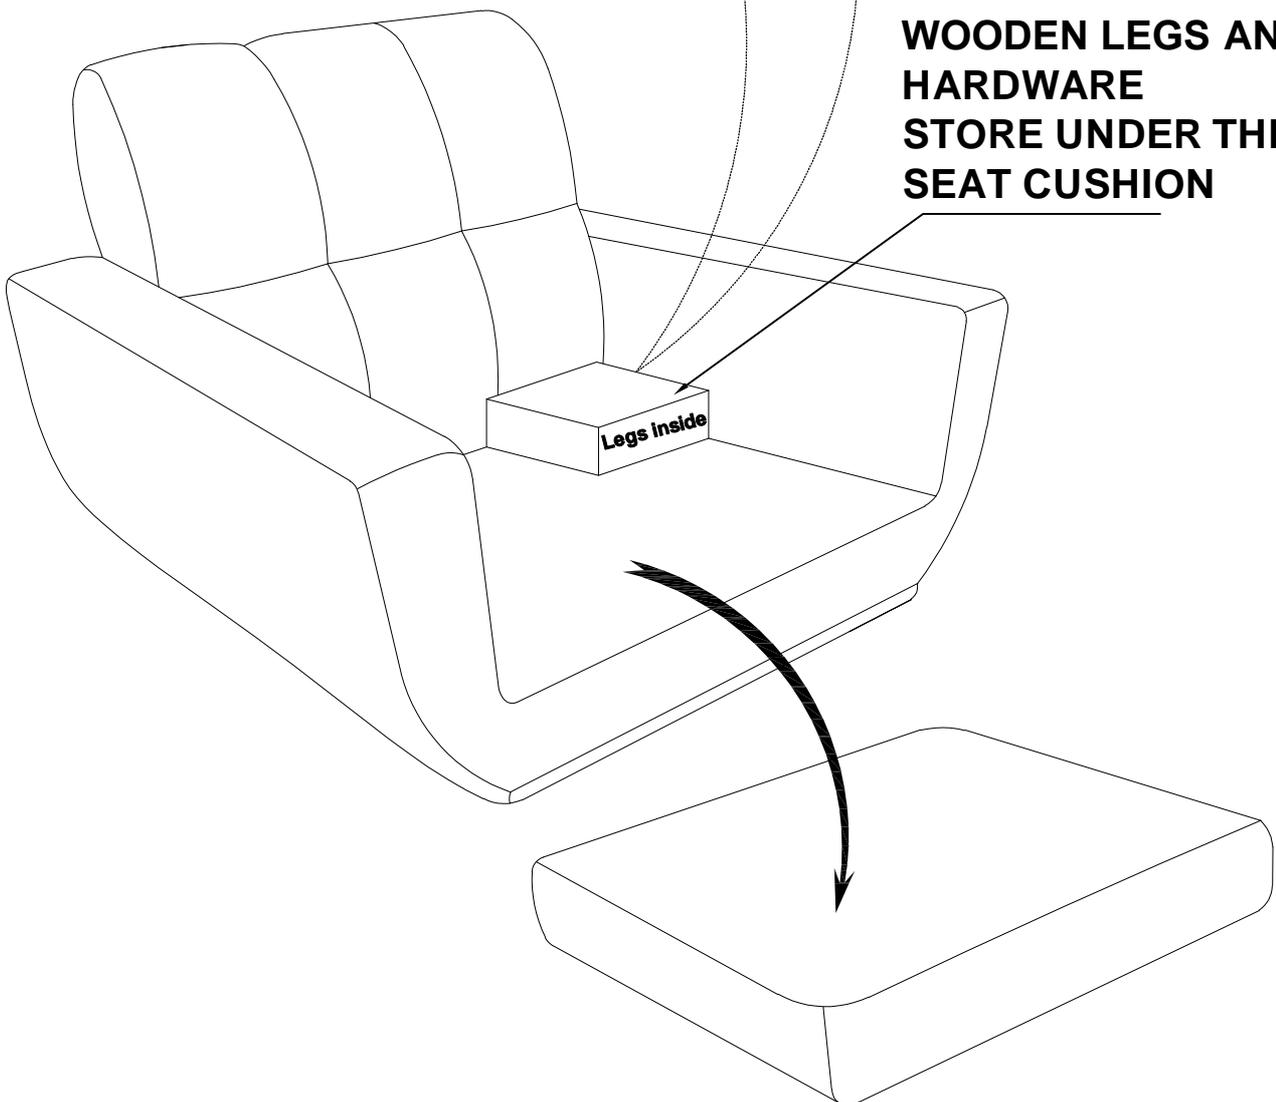

## Step #1

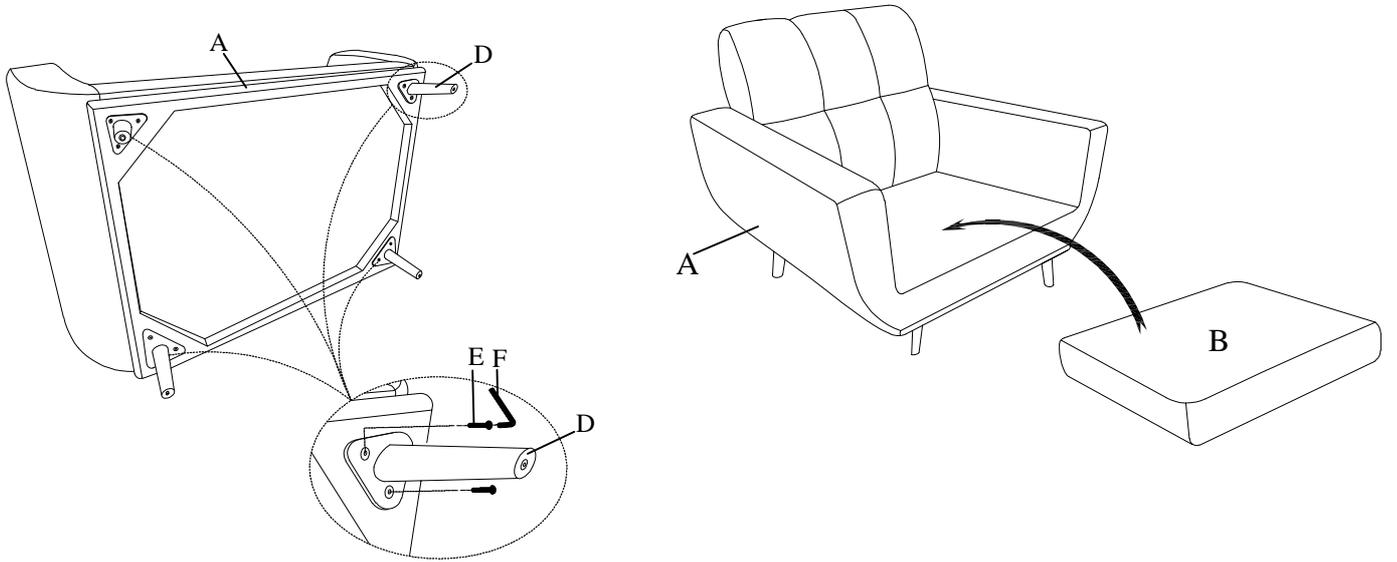


## Step #2

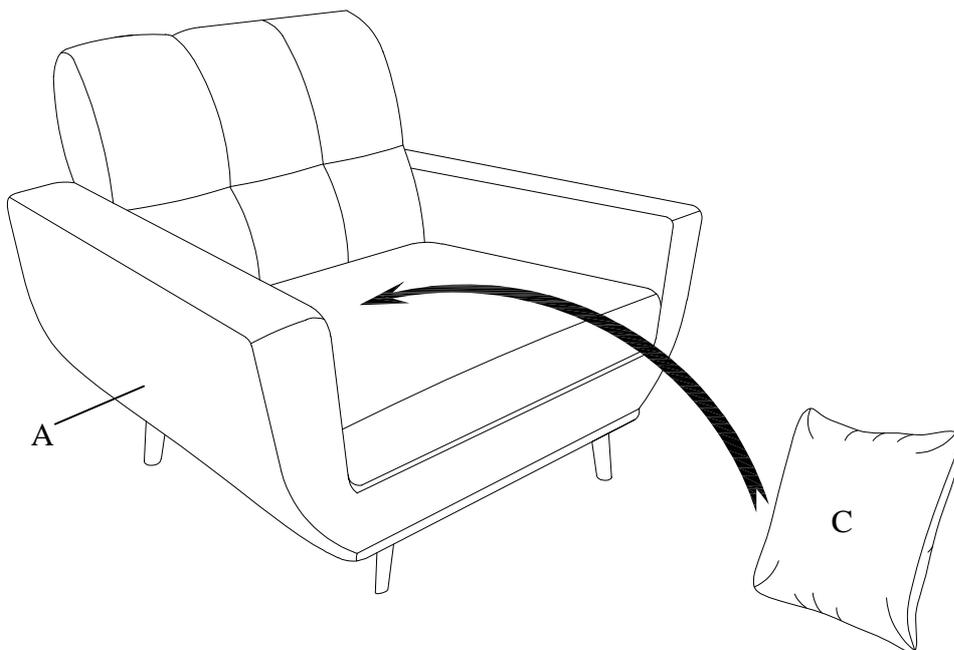

### Step #3

Assembly completed.

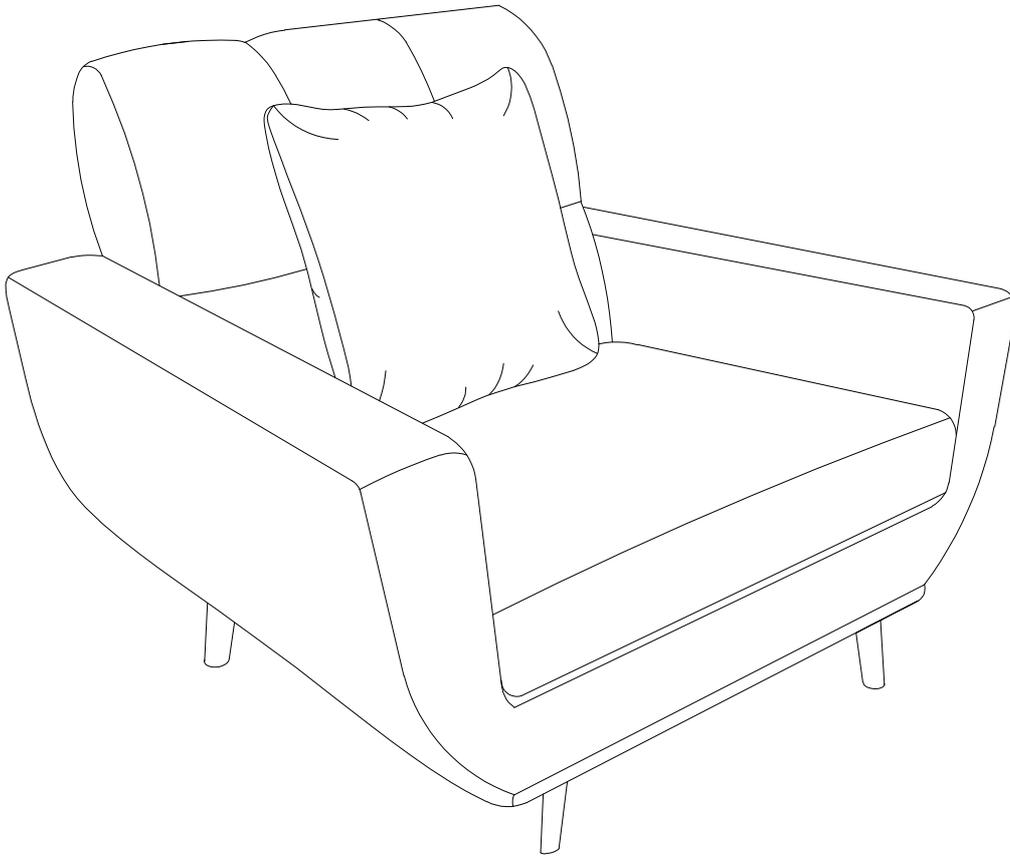

## Care Instruction for chenille fabric Furniture:

In order to maintain the original appearance of your chenille fabric, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage chenille fabrics. Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.